


Underwood (London) Individual programming system


Computer CD -ROM

Installation Guide

1. Explore the cd-rom and double click on “Setup.exe” 
 2. “Setup.exe.” will provide you the installation drivers and software for the Rotobox program. Wait for this to process.
 3. Follow the instructions on the setup window. Accept the licence agreement. This setup will start automatically.
 4. Remove the battery cover from the back of the Rotobox
 5. Plug in the Underwood adapter to the Rotobox to supply the power
 6. Connect the Underwood MINI USB cable to the Rotobox and connect the USB cable to the USB port of your personal computer.
- ❖ **Now you are ready to program your Rotobox. Please follow the instructions below. Open the Rotoboxcontroller.exe icon from your desktop or task bar.**
1. Click on the icon of the Underwood (London) individual programming system.




2. Select the number of daily rotations, move the quick bar from 30rpd to 36000rpd.

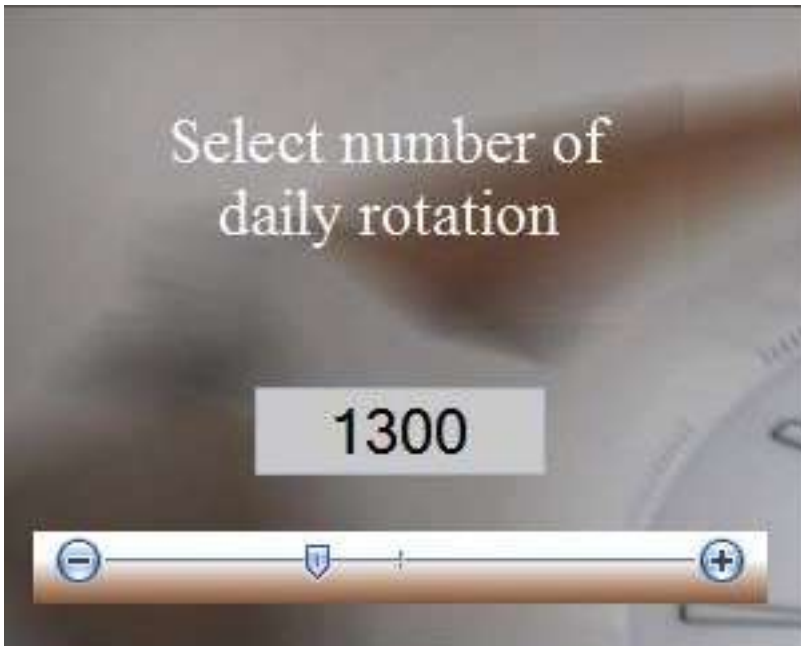

3. Select the direction of the rotations:

- Clockwise
- Counter-clockwise
- Both

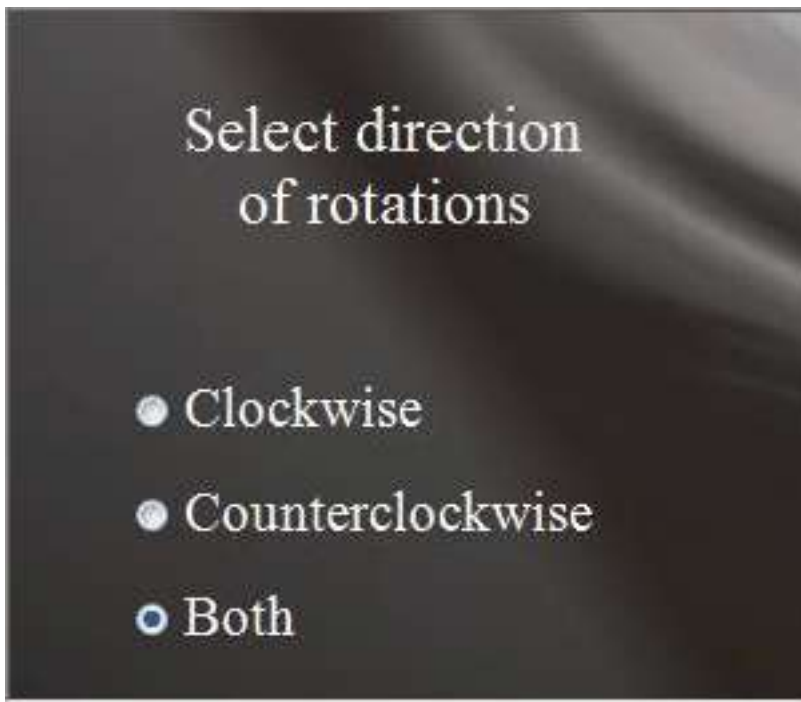

4. Click “PROGRAM”.



Congratulations now you have programmed your RotoBox.

5. If the programming fails, follow the instructions below.

- Be sure that the Rotobox has been properly connected to the power supply.
- Be sure that the Rotobox is properly connected to the USB cable and to the PC before launching the software program.

6. System requirements:

- Operating System: Windows 2000, Windows XP, Windows Vista, Windows 7. For users of windows 2000 we recommend service pack 2.
- CPU: 1200 mhz x86 cpu.
- RAM: 128 MB RAM
- Hard disk space: 50 MB

Web Site: www.underwood-london.com

Mail address: info@underwoodlondonltd.com